


OKLIFE STAINLESS STEEL JUICE EXTRACTOR WITH BLENDER

MODEL: OKL8890

INSTRUCTION MANUAL

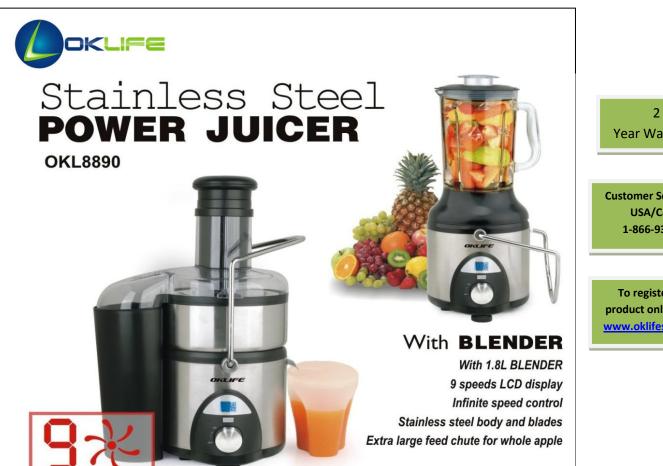

Year Warranty

Customer Service Line: USA/Canada 1-866-936-9444

To register your product online, go to www.oklifestore.com

This manual contains information regarding the safety and operation of this product. Before you use, read and understand all instructions, cautions and important safeguards. Failure to do so can result in serious injury or damage of product.

WWW.OKLIFESTORE.COM

INTRODUCTION

OKL8890 is a multi-use appliance that comes with a powerful Juice Extractor and a Blender attachment. Juice fruits and vegetables with the Juice Extractor and enjoy fresh smoothies or drinks for healthy breakfast with the blender attachment.

OKL8890 TECHNICAL PARAMETER

Voltage: AC 120V, 60Hz
Motor Power: 800 Watts
Juice Mug size: 1 Quart
Blender Mug size: 2 Quart

UNPACKING THE UNIT

- Remove the packing material carefully; your Juice extractor comes partially assembled in the packaging box. Before using your juice extractor take out all the detachable parts and wash them in water to remove dust and residue. Consult the cleaning section of the manual for proper cleaning instruction.
- Remove and save all literature
- Always place your juice extractor on a dry and level surface

JUICE EXTRACTOR NAMES AND PARTS

No.	Names and Parts	
_		
1	Food Pusher	Food Pusher
2	Transparent cover	
3	Juicer blade	<u>a A </u>
4	Middle body	Transparent cover Glass Mug lid
5	Transmitter	- Glass Mug
6	Locker	Juicer blade
7	Main Body	Middle body
8	Switch	Transmitter — Anti-water circle
9	Juice Mug	Residue Mug Blade combination
10	Residue Mug	Glass Mug Base
11	Blender Glass Mug lid	Main Body
12	Blender Glass Mug	
13	Anti-water circle	Switch Juice Mug
14	Blade combination	
15	Blender Glass Mug	
	Base	

IMPORTANT SAFEGUARDS WHEN USING ELECTRICAL APPLIANCES

- 1. READ ALL INSTRUCTIONS before using your OKLIFE Juice Extractor with blender
- 2. Always use juice extractor on a dry & level surface.
- 3. Do not let cord hang over edge of table or touch hot surfaces or become knotted.
- 4. Do not place on or near a hot gas or electric burner or any hot surface.
- 5. Close supervision is necessary when the appliance is operated near children. Do not allow children to use this appliance.
- 6. Handle the appliance carefully; if the unit is dropped or bumped, it may cause the unit to malfunction.
- 7. To protect against electric shock, do not immerse cord, plug the motor base in water or other liquid.
- 8. Do not operate this appliance with a damaged cord or plug. If appliance malfunctions or has been damaged in any manner, return the appliance to our service center for examination by calling the toll-free number on the cover of this manual.
- 9. Always leave the appliance unplugged when not in use or during assembling.
- 10. Connect the appliance only to properly wired wall outlet; never connect to a loose AC wall outlet.
- 11. Only use recommended accessory attachments from the appliance manufacturer to avoid fire, electric shock or injury to persons
- 12. Assemble all parts properly and completely before using machine. The unit will not turn on if it is not properly assembled
- 13. Do not put your hands or any other object into food opening while the juicer is in operation.
- 14. Do not touch the small cutting blades in the base of the stainless steel filter basket.
- 15. This unit is suitable for juicing and blending fruit (such as apple) and vegetable.
- 16. Blender mug can be used for crushing ice, mixed fruit. Do not use Blender mug to cut, chop or to process hard fruit.
- 17. This product is for household use only
- 18. Do not use outdoors.

ADDITIONAL SAFEGUARDS

- This appliance should always be operated on stable place and flat level place and according to the instruction manual
- This appliance comes with a safety protective switch; if the unit is not installed properly per instruction, the appliance will not work
- The appliance also comes with a thermal protective device against high temperature which will shut the device down when the motor temperature is too high. The thermal protective device preserves your unit and prolongs the life span and longevity of this unit. Power on the unit when the unit has cooled down in about 10 to 15 minutes.
- Do not operate with damaged power cord, if the power cord is damaged, call your electrician or the 800 number in the front cover of the manual.
- Do not put your hand into the feed chute when operating the appliance
- Always shut down the power before cleaning the residue mug
- For effective juicing, slowly and gently press down the food pusher while juicing

ASSEMBLING INSTRUCTIONS FOR YOUR JUICE EXTRACTOR

CAUTION

MAKE SURE JUICE EXTRACTOR IS UNPLUGGED BEFORE STARTING TO ASSEMBLE

FOLLOW THE STEPS BELOW TO ASSEMBLE YOUR JUICE EXTRACTOR

Step 1

Place the Middle Body onto the Main Body and secure firmly.

Step 2

Set the Juicer Blade into the Transmitter and press to tighten

Step 3

Place the Transparent Cover onto the Middle Body and push down the locker into locking position.

The unit will not work if this step is not properly placed and locked.

Step 4

Slide the Residue Mug under the Middle Body residue spout.

Place Juice Mug under the Middle Body juice spout

Step 5

Connect the plug to the electrical wall unit and turn the Switch on, the motor starts to run and ready for juicing.

Step 6

Insert fruits and vegetables into the open feed chute on the Transparent Cover.

Gently slide the Food pusher down the feed chute

CAUTION

Do not put your hands or any other objects into the feed chute when operating the unit

For effective juicing, slowly and gently press down the food pusher through the feed chute

NOTE

The Juice Extractor will not work until the Top lid of the Pulp Container is LOCKED properly

ASSEMBLING INSTRUCTIONS FOR YOUR BLENDER ATTACHMENT

Step 1

Prepare the fruits to blend by cutting the fruits into small pieces and deposit into the Blender Glass Mug.

Add water not to exceed maximum line on the mug; if using crushed ice, include some ice blocks and cover the Blender Glass mug with the Glass Mug Lid.

Step 2

If you have assembled the unit for juicing, do the following to prepare your dual unit for blending. Remove Food Pusher, Transparent cover; Juice Blade and the Middle Body.

Step 3

Insert the Blender Glass Mug onto the Main Body.

Note that if the Blender Glass is not placed properly into the Main Body, the unit will not turn on

Step 4

Connect the plug to an Electrical outlet and turn on the Switch.

Use the Pulse Switch to control the juicing effect.

CARE AND CLEANING

- For easy care, immediately after use, rinse each of the removable parts in warm water and allow parts to air dry
- Removable parts to be rinsed: Food pusher, transparent cover, juicer blade, middle body, juice mug, residue
 mug, blender glass mug lid, blender glass mug, anti- water circle, blade combination, and blender glass mug
 hase
- Do not immerse the Main Body in water, only wipe with damp cloth.

CAUTION

Do not rinse or immerse the Main Body in water or any other liquid

Turn off the power before cleaning the residue mug

CAUTION

- 1. To have the best extracting effort and prolong the lifespan of the unit, please clean the pulp container, filter and blade after extracting one cup of juice
- 2. To prolong the lifespan of your unit, do not run the motor continuously for more than three minutes
- 3. This unit is suitable for juicing and blending fruit and vegetables. Blending mug can be used for crushing ice and mixed food. Don't use glass blender to cut, chop or to process hard fruit.

CAUTION

- 1. Make sure the juicer is turned OFF when replacing/installing the blender.
- 2. Do not keep the switch in the ON position and use the plug to turn the juicer ON.
- 3. To have the best extracting result and prolong the lifespan of machine, clean the pulp container and filter/blade after extracting each cup of juice.
- 4. To ensure safety and proper functioning of machine, do not work continuously for over 3 minutes.
- 5. This machine is good for juicing and blending fruits and vegetables. Please take caution that the blending jar can be used for crushing ice and mixing food while the glass blender cannot be used to cut, chop or process hard fruits.

PROBLEM SOLVING

PROBLEM	LIKELY PROBLEM	SOLUTION
Unit will not work	Safety switch not connected or broken	Reassemble the machine to make sure every part is locked well
Motor emits smoky smell when juicing	Ran motor too long, motor overheat	Stop and let motor rest
Motor appears to stop when juicing	Power is off, the fruit is probably too hard to extract, or the fuse is burnt because it ran too long	Recheck the power, remove hard fruit and try with a softer fruit. If it fails to work, return unit to customer service center
Excess pulp building in the filter basket	The pulp container maybe full	Clear the pulp container
Pulp too wet and insufficient	Fruit pushed too fast when juicing	Do not push fruit too fast

WARRANTY AND SERVICE RELATED INFORMATION

Call the 800 number on the front cover of the instruction manual for all questions relating to service, repair or questions on how to use this appliance. Please consult the website listed on the front cover of the manual for detailed information on sending back an appliance.

LIMITED ONE YEAR WARRANTY POLICY

Every unit is thoroughly inspected and tested before leaving the factory. It is warranted to be free of defects from workmanship and materials for the period of ONE YEAR from the date of original purchase. Should any trouble develop during the period of ONE YEAR, return the complete unit with the original receipt as proof of the date of sale to our Customer Service Center. If inspection shows the trouble is caused by defective workmanship of material, the unit will be replaced with similar unit that is new or factory refurbished at our option. For mailing address and instructions call 1-800-000-0000 between 9:00 am and 5:00 pm Eastern Standard Time, Monday through Friday. You can also visit our website at www.oklifestore.com for complete information.

This warranty does not apply where:

- This unit has been abused, misused or improperly maintained
- Alterations or repairs have been made on the unit
- Repairs are required because of normal wear and tear
- Repairs has been made or attempted by others
- · Damage is caused by commercial use
- Glass parts and other accessory items that are packed with the unit are not covered by the warranty
- Shipping and handling costs associated with the replacement of unit is not covered by warranty
- Any purchase outside of the United States and Canada